



Corinex AV200 SNR Viewer

AV200 SNR Viewer have one software prerequisite. It's LabVIEW RunTime 7.1 which can be downloaded from <ftp://ftp.ni.com/support/labview/windows/runtime/7.1/LVRunTimeEng.exe>

After installing LabVIEW, one is eligible to run AV200 SNR Viewer without problems.

Once executed, AV200 SNR Viewer depicted below will start. Initial configuration (fields that must be filled prior to scanning SNR) consists of IP address of local modem and IP address of remote modem. Addresses should be entered to fields marked with green frame, once entered, click on „START“ button marked with red frame. Graphs with SNR (signal to noise ratio) and CFR () will be loaded.



For any questions regarding this tool, please contact me via email : raduz@corinex.com
You can find example of running SNR Viewer on next page.

Raduz

Example of communication with notches enabled.

